


HJ26363, Rev 0 10/20

5TH WHEEL HITCH 31K RAM OE PREP UNDER BED

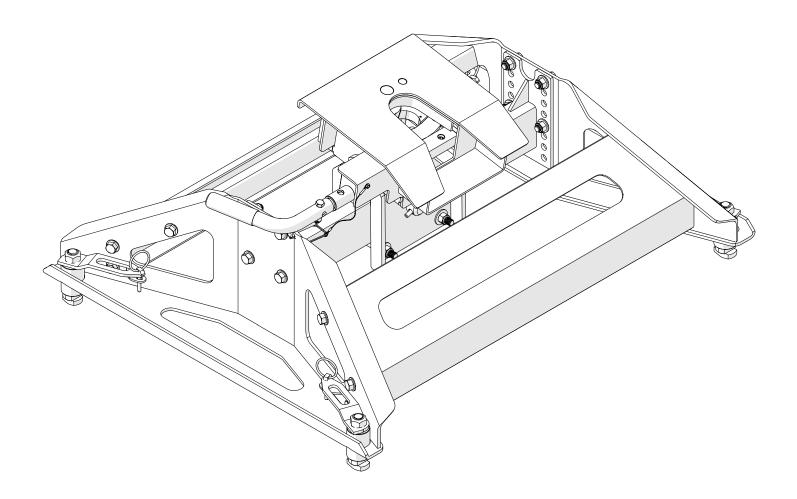

OPERATOR MANUAL

WARRANTY POLICY, OPERATOR MANUALS, PARTS MANUALS & REGISTRATION

Go online to www.demco-products.com to review Demco warranty policies, operator manuals and register your Demco product.

A Torque Specifications

BOLT TORQUE DATA FOR STANDARD NUTS, BOLTS, AND CAP-SCREWS.

Tighten all bolts to torques specified in chart unless otherwise noted. Check tightness of bolts periodically, using bolt chart as guide. Replace hardware with same grade bolt.

NOTE: Unless otherwise specified, high-strength Grade 5 hex bolts are used throughout assembly of equipment.

Torque figures indicated are valid for non-greased or non-oiled threads and heads unless otherwise specified. Therefore, do not grease or oil bolts or capscrews unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

* GRADE or CLASS value for bolts and capscrews are identified by their head markings.

Bolt Torque for Standard bolts *

" A "	GRADE 2 lb-ft (N.m)		GRADE 5 Ib-ft (N.m)		GRADE 8 lb-ft (N.m)	
1/4"	6	(8)	9	(12)	12	(16)
5/16"	10	(13)	18	(25)	25	(35)
3/8"	20	(27)	30	(40)	45	(60)
7/16"	30	(40)	50	(70)	80	(110)
1/2"	45	(60)	75	(100)	115	(155)
9/16"	70	(95)	115	(155)	165	(220)
5/8"	95	(130)	150	(200)	225	(300)
3/4"	165	(225)	290	(390)	400	(540)
7/8"	170	(230)	420	(570)	650	(880)
1"	225	(300)	630	(850)	970	(1310)

Bolt Torque for Metric bolts *


	CLASS 8.8		CLASS 9.8		CLASS 10.9	
" A "	lb-ft	(N.m)	lb-ft	(N.m)	lb-ft	(N.m)
6	9	(13)	10	(14)	13	(17)
7	15	(21)	18	(24)	21	(29)
8	23	(31)	25	(34)	31	(42)
10	45	(61)	50	(68)	61	(83)
12	78	(106)	88	(118)	106	(144)
14	125	(169)	140	(189)	170	(230)
16	194	(263)	216	(293)	263	(357)
18	268	(363)			364	(493)
20	378	(513)			515	(689)
22	516	(699)			702	(952)
24	654	(886)			890	(1206)



Side Rail Assembly Instructions


- 1. Turn locking handles out and place the side rail plates #4 into the base rail holes in truck box, make sure the larger yellow/gold colored locking tabs go into the rear bed sockets. Turn the locking handles in, if they do not turn in, you can adjust them by removing washers under the handle. See illustration below.
- 2. Loosely bolt the saddle bracket #3 to the side rails #4 using the 1/2" x 1 1/2" bolts #1, and nylon lock nuts #2 provided in the bolt package.
- 3. Loosely bolt the cross braces #5 to the side rails #4 using only 1/2" x 1 1/2" bolts #1 and nylon lock nuts #2.
- 4. Tighten all the bolts.
- 5. Unlock and remove the hitch assembly from the base rails and put to the side for later.

IMPORTANT NOTE: Apply a little grease or lubricant to the part of the pins that insert into the base rails to help maintain smooth operation and rotation of pins and to protect from the elements. Turn the pins occasionally to prevent them from seizing.

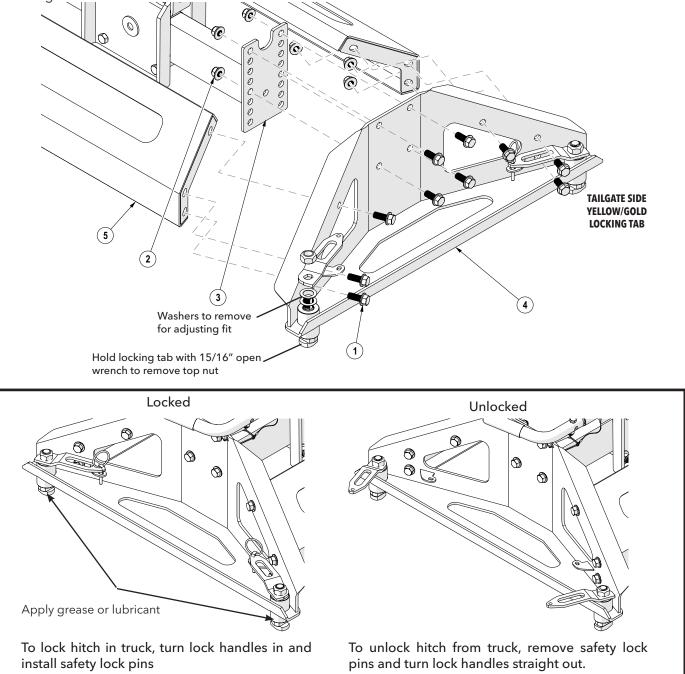



HITCH BASE PARTS BREAKDOWN

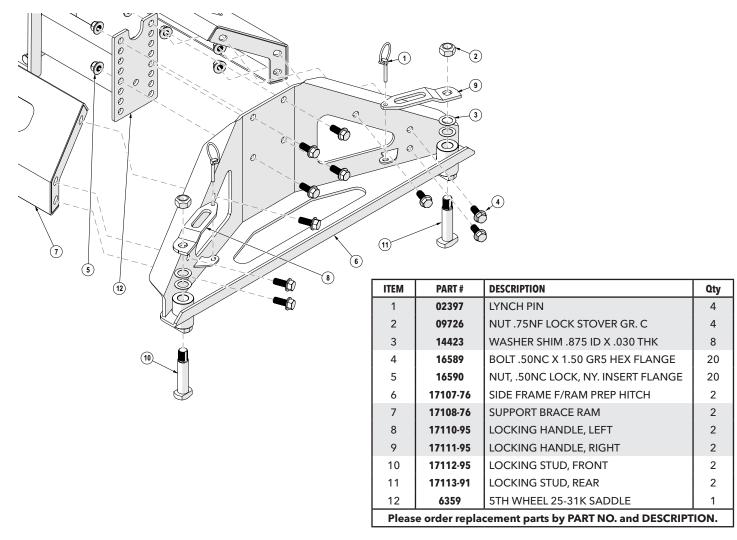

ISO

6359 PARTS BREAKDOWN

ITEM	PART #	DESCRIPTION	Qty	
1	00085 .50 FLAT WASHER		2	
2	01896	BOLT .50NC X 4.00 GR5 HEX	2	
3	02178	NUT, .50NC LOCK, NY. INSERT	2	
4	14151	PIVOT SADDLE TUBE ASSY.	1	
5	14153	PIVOT SPACER BUSHING	2	
6	14207	TEFLON SHIM	1	
7	14209	PIVOT PIN ASSY.	1	
8	14221	LYNCH PIN, .313	2	
9	14222	AS PIVOT PIN 1" X 9.38	1	
10	15769	URETHANE PIVOT BUMPER 3/8" THICK	2	
11	17109	PIVOT SADDLE ASSEMBLY	1	
Please order replacement parts by PART NO. and DESCRIPTION.				



4010 320th St., Boyden, IA. 51234 Phone: (712) 725-2311 Fax: (712) 725-2380 Toll Free: 1-800-54DEMCO (1-800-543-3626) Demco warranty policies, operator manuals, and product registration can be found online: www.demco-products.com

