

# COVER PAGE

RAM 3500  
58520 ADAPTER KIT  
FOR 30035 KIT

## NOTE!

Prior to installing product, please visit one of our websites to assure your kit contains the most recent revision to installation instruction and verify vehicle application.

***[www.ReeseProducts.com](http://www.ReeseProducts.com)***

## 2013-CURRENT RAM 3500 (REQUIRES 58520 BRACKET KIT)




Read pages 2-3 of 30035 instructions before starting installation. Failure to do so could result in significant vehicle damage!


### IMPORTANT NOTES FOR THIS INSTALLATION:

1. Tube spacers and 4.5" carriage bolts used to attach through forward Bed Sill (Row 2).
2. Rib neck bolts will need to be pulled through rearward access holes in frame with supplied pull wire.
3. Do not drill thru both walls of frame. Drill only thru wall of frame to which bracket is mounted.
4. It is very important that brackets in Row 3 are against the forward side of the Bed Sill as shown. **Due to dimensional instability in Bed Sill placement with the Ram truck**, interference could result when drilling in Row 2. Observe caution note below and double check all areas prior to drilling.
5. Forward brackets can be clamped to the frame using the 4-3/8" U-Bolts supplied. Torque to 75 Ft.-Lbs. (Grade 5).
6. \*Due to tubular frames having thinner walls than previous C channel frames, extra caution needs to be used when mounting with the optional welding.

Front of Vehicle  
←

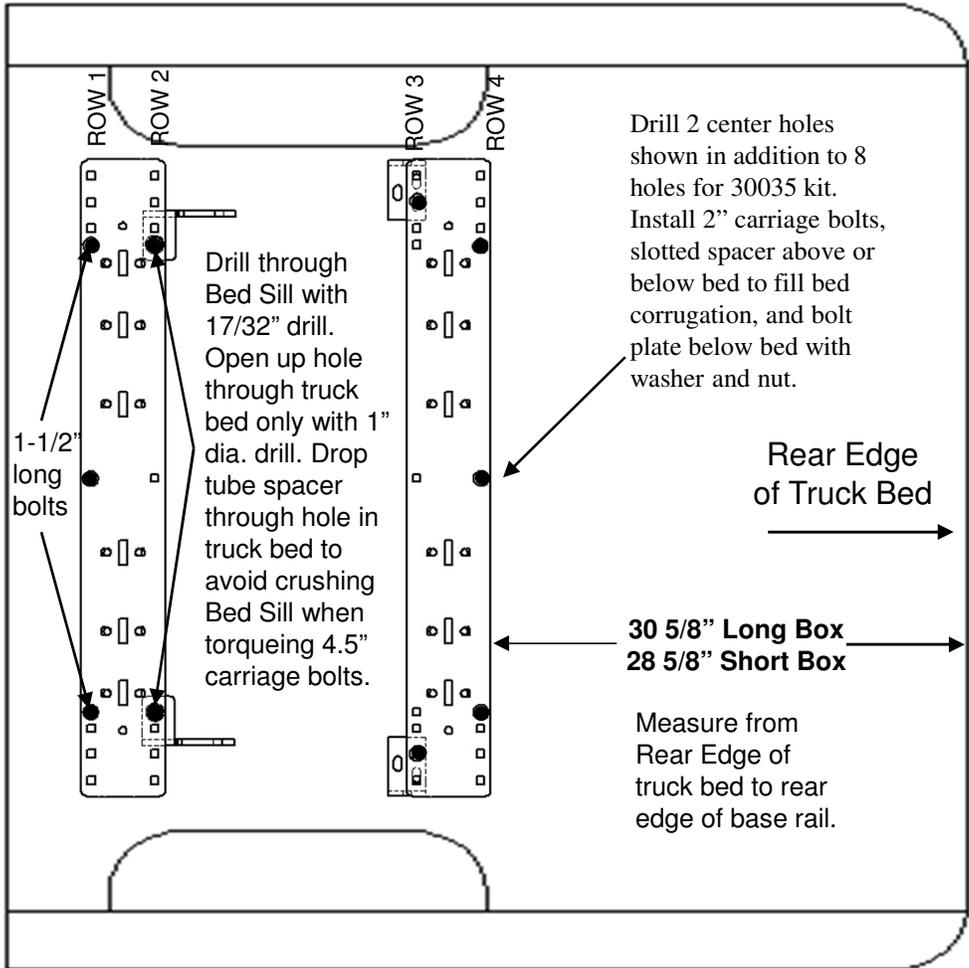

Use provided (30035 kit) tube spacers and 4.5" carriage bolts to attach through Bed Sill

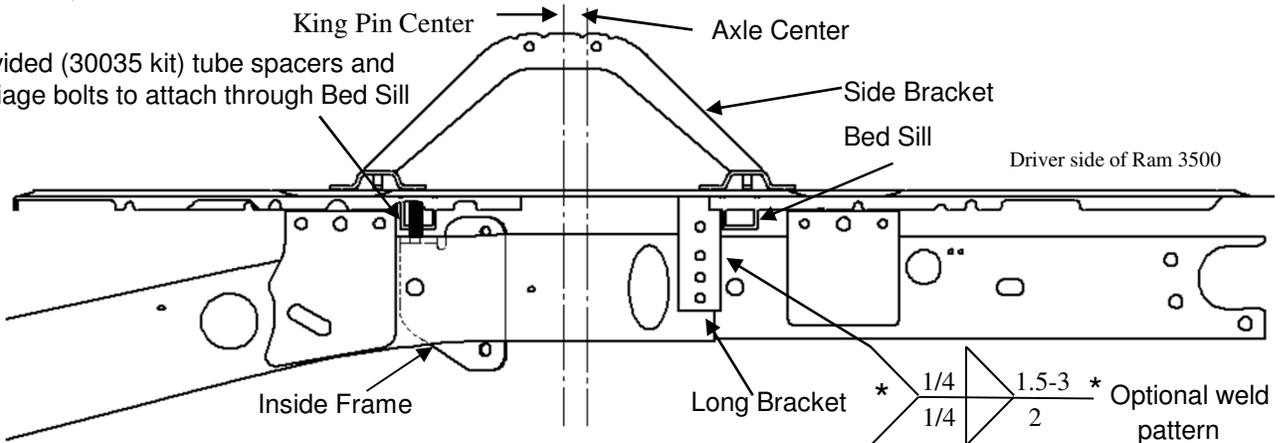

**Check for obstructions before drilling. Failure to do so could result in damaged fuel or brake lines, structural members, etc. CEQUENT PERFORMANCE PRODUCTS does its best to communicate tow vehicle manufacturer changes; however, it is ultimately the responsibility of the installer to prevent damage due to installation.**